

ICAD NO₂ / NO_x / NO Analyzer

PATENTED, FAST, ACCURATE AND DIRECT NITROGEN DIOXIDE DETECTION
ADDITIONAL NO_x / NO MEASUREMENT WITH CONVERTER (OPTIONAL)



The ICAD (*Iterative CA*vity enhanced *DOAS*) NO₂ / NO_x / NO measurement system uses direct optical absorption spectroscopy in the spectral range between ~ 430 to 465 nm. By measuring the absorption spectrum and applying the ICAD algorithm, the unique and characteristic absorption structure of NO₂ is directly identified and separated from other overlapping absorptions like water vapour (H₂O) or Glyoxal (CHOCHO). This gives the advantage of direct NO₂ measurements (in comparison to CLD) without interferences to other substances or the need of drying mechanism which introduce new interferences (e.g. CLD, CRD, CAPS).

As the ICAD system relies not on absolute intensities, but rather characteristic differential absorption structures, it

has no absolute zero point drift and is insensitive to temperature variations, vibrations and light source degradation like other optical instruments. It is thus the perfect tool for accurate and precise long term measurements, but also for mobile applications, especially where high precision and fast response times are required. An internal converter for NO to NO₂ (optional) based on gas phase titration (GPT) with a NO_x free O₃ source allows measuring also NO_x / NO with the same system (patent pending). The operation is simple as no consumable gases are required. Data display is directly available with any WiFi or LAN device.

Patents: EP3329251, US15/748,923, China patent pending

PROPERTIES (TYPICALLY)

Measurement range *1	0 - 5000 ppb	Cross sensitivity	None (from physical principle)
Limit of Detection (@ 2 s) *1	0.3 ppb	Power consumption	< 30 W, 12 V (typ.)
Precision (1σ @30s) *1	0.15 ppb or 2%	Start-up time	< 1 min
Detection of NO₂	Direct (without converter)	Temperature rang	-10 - 40° C
Detection of NO_x / NO	By conversion to NO ₂ (GPT)	Temperature sensitivity	< 0.01 ppb/° C
Response Time NO₂ / NO_x (10% - 90%) *2	2 s @ 1 l/min / 1 s @ 2 l/min	Weight	< 10 kg (adjustable)
Zero Drift	None (from physical principle) < 0.1 ppb/month	Size	Waterproof PC: 16" x 12" x 5" Rack housing: 6.7" x 19" x 24"
Sample flow	0.5 - 2 l/min	Consumable gases	None
Calibration	„Intrinsically“ calibrated, no calibration gas needed	Other Gases	H ₂ O, CHOCHO, CO ₂ (optional)
Characterization of absorption path	With helium gas	Computer system	Internal embedded PC, with data analysis & measurement software
Mechanical stability	Insensitive to vibrations	Data communication	LAN / WiFi; RS232 (on request)

COMMENTS:


*1 Custom specifications with different measurement range are possible. By reducing the measurement range better precision and LOD can be achieved.

*2 Response: Different measurement cell types are available, allowing different response times. Smaller measurement cells allow a much faster response time, but result typically in a lower precision.

APPLICATIONS

- High precision NO₂ / NO_x measurements (science, research, background air pollution monitoring)
- Urban air quality monitoring (outdoor, streets, tunnels, street canyons, mobile measurements)
- Indoor air quality monitoring
- Mobile, quick & precise NO₂ / NO_x pollution study, mobile personal exposure studies for workspace, pedestrians etc.
- Emission monitoring (e.g. stacks)
- Real Driving Emission Measurement of vehicles (RDE): requires extra CO₂ option to derive NO_x / NO₂ per km or kWh

THEORY OF OPERATION

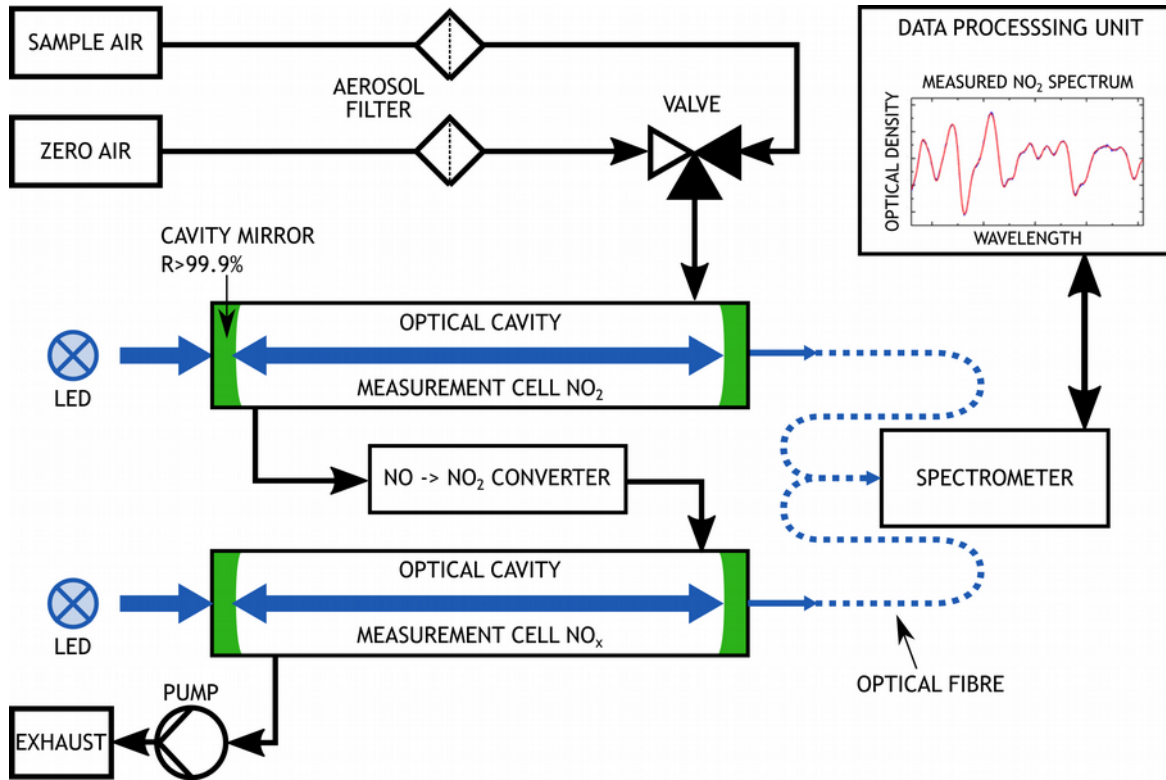

Flow scheme and Measurement Principle of the ICAD NO₂ / NO_x / NO measurement system (incl. additional NO to NO₂ converter for NO_x measurement).

ADVANTAGES

BENEFITS

High measurement accuracy

INNOVATION

- Direct NO₂ measurement
- Low measurement error
- Measurement range adaptable
- No zero-point or calibration drift, 100% reproducibility
- No interferences
- No water dryer needed

Favorable initial and operating costs

- Parallel NO-Measurement (with converter)
- Simple and robust setup
- No consumables (e.g. gases)
- Long lifetime
- Fast response within seconds

Simple operation

- No heating time
- No calibration with gases
- High stability (not sensitive to shocks, vibration, temperature)
- Light weight
- Low power and 12V operation

Dated: 17.03.2020 | ©2019 Airyx GmbH. All rights reserved. Justus-von-Liebig-Str. 14, 69214 Eppenheim/Heidelberg/Germany, airyx.de